



SILICONE

COLOUR GUIDE

FIND YOUR COLOUR. SEE IT GLOW.

COLOURED SILICONE

Colour you can see, even with the power off. Coloured tubing brings your design to life when illuminated.

COLOUR	OFF	ON
B Blue		
F Golden Yellow		
G Green		
H Ice Blue		
I Lemon Yellow		
J Light Baby Pink		
M Mint Green		
N Mint Teal Green		
O Light Red		
P Orange		
R Pink		
S Purple		
T Red		
X Yellow		

WHITE SILICONE

A white tube when switched off. Turn it on to reveal your chosen colour, from soft pastels to vibrant shades.

COLOUR	OFF	ON
A Baby Pink		
C Cool Ice Blue		
E Deep Green		
K Lilac		
L Midnight Blue		
Q Hot Pink		
U Sunbeam Glow		
V Tangerine Glow		
CLASSIC WHITES		
D Cool White		
W Warm White		

MORE COLOURS. ONE SIGN.

Upgrade to RGB or RGBW

Explore colour-changing light and dynamic effects for your design.

Colour previews are indicative. Screen settings, ambient light and brightness can affect appearance. Letter codes match the colour chart. Confirm your chosen colour with The Neon Factory.

YOUR COLOUR. YOUR DESIGN. YOUR NEON.




COLOUR GUIDE

PREMIUM RGB

CHOOSE YOUR COLOUR. SET THE MOOD.


NINE COLOUR EXAMPLES

Use the colour wheel to choose your shade, then adjust brightness and mode.

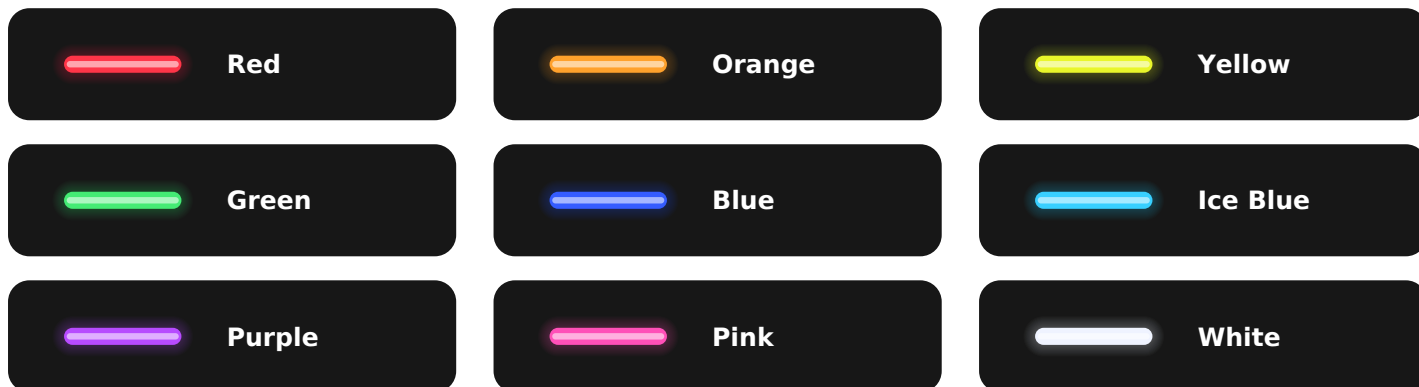

RGB REMOTE CONTROL

Your colours, brightness and lighting modes - controlled by remote.

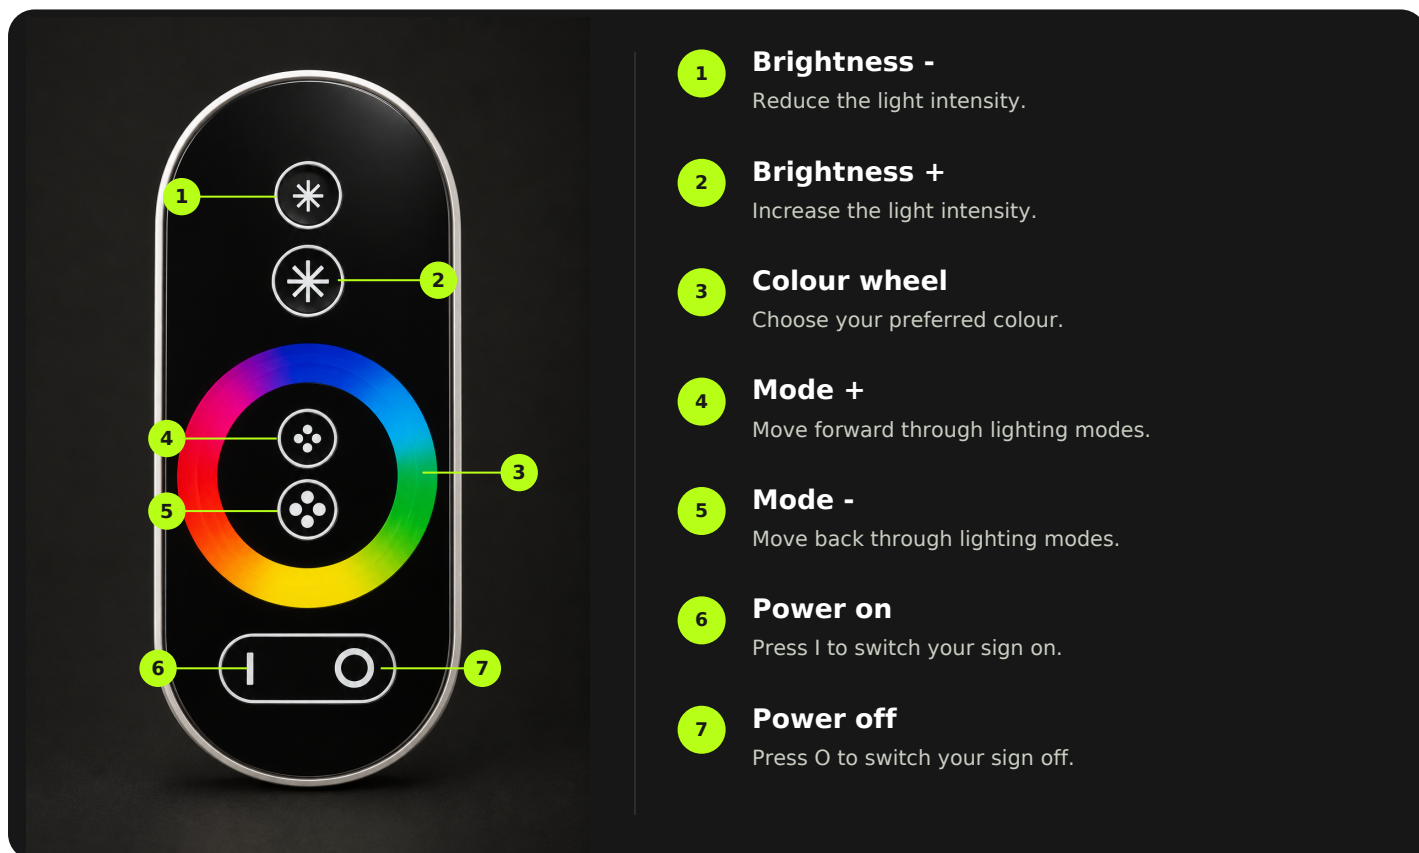

Colour examples are indicative; appearance varies with your screen and brightness settings.

YOUR COLOUR. YOUR DESIGN. YOUR NEON.



COLOUR GUIDE

PREMIUM RGBW

COLOUR + WHITE. CONTROLLED BY REMOTE.

YOUR RGBW REMOTE

REMOTE BUTTON GUIDE

Choose a colour, adjust the brightness and explore your lighting effects.



1 ON / OFF

ON switches your sign on.
OFF switches your sign off.

2 AUTO

Automatically cycle through the lighting effects.

3 MODE + / MODE -

+ selects the next lighting mode.
- selects the previous mode.

4 QUICK / SLOW

QUICK speeds up the effect.
SLOW reduces the effect speed.

5 BRIGHTNESS

Upper sun: increase brightness.
Lower sun: reduce brightness.

6 COLOUR PRESETS

R = red, G = green, B = blue.
Each coloured key selects its displayed shade.

7 W - WHITE

Select white light using the W button.
Adjust its intensity with the brightness keys.

8 STATIC COLOUR

Three-circle key:
select / lock a static colour.

9 MUSIC MODE 1

3 TAP key:
activate music mode 1.

10 LOCK

Padlock key:
activate the lock function.

11 MUSIC MODE 2

Music-note 2 key:
activate music mode 2.

FOUR LIGHTING MODES

Use MODE + / - to browse effects, then QUICK / SLOW to adjust the pace.

01 STROBE



Sharp on-and-off blinking.

02 FLASH



Rapid jumps between colours.

03 FADE



Soft, gradual colour transitions.

04 SMOOTH



Slower, seamless colour blending.

Lighting effects are illustrative. Actual colours and effect speed depend on your settings.

YOUR COLOUR. YOUR DESIGN. YOUR NEON.