



CREATE YOUR OWN / OPTION 9

DIMMER & POWER

REMOTE CONTROL + BATTERY PACK

DIMMER & REMOTE

INDOOR USE

Set the brightness for your space or add flash, pulse and strobe effects.
The remote sends your settings to the inline dimmer, which controls your sign.



ON / OFF

Green turns your sign on; red turns it off.

BRIGHTNESS

Upper sun: brighter. Lower sun: dimmer.

10%-100% PRESETS

Jump straight to your chosen brightness level.

LIGHT

Return your sign to full brightness.

MODE - / +

Step through flash, pulse and strobe effects.

SPEED - / +

Slow down or speed up the selected effect.

TIME: 5 / 10 / 30 / 60


Set automatic switch-off after 5, 10, 30 or 60 minutes.

CONNECTING YOUR DIMMER

With power off, connect your adapter to INPUT and your sign to OUTPUT on the dimmer.

BATTERY PACK

8 × AA BATTERIES REQUIRED

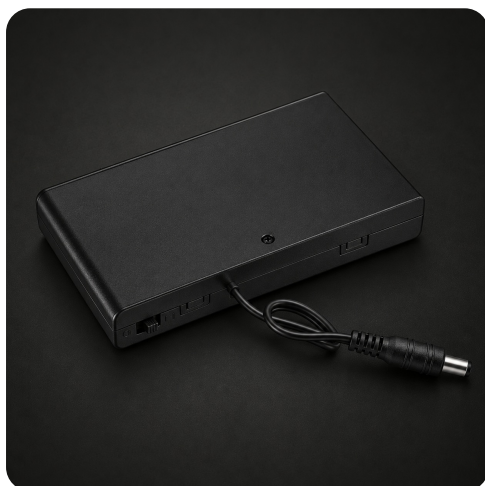

A portable power option for compatible signs,
ideal when a wall socket is out of reach.

1 LOAD THE BATTERIES

Open the cover and insert 8 AA batteries,
matching the + / - markings. Close the cover.

2 CONNECT YOUR SIGN

Plug the pack's attached cable into the
power lead of your compatible sign.

3 SWITCH ON / OFF

Slide the pack's switch to ON to power your sign.
Switch it OFF when you have finished.

Battery life varies with sign size, brightness and batteries. Ask us to confirm compatibility.

YOUR COLOUR. YOUR DESIGN. YOUR NEON.

sales@theneonfactory.com.au